


# BlueMAX PLUS™ System (SCR & Passive DPF System)

## Maintenance Interval Schedule

Service Interval	Directions
<b>Daily (while in operation)</b>	<ul style="list-style-type: none"> <li>Observe PTLOG 150 backpressure monitor (cab mounted) for any pressure indicators - yellow or red (see PTLOG 150 technical manual)</li> <li>Observe urea alarm box (cab mounted) for indicator codes (see BlueMAX™ operations manual)</li> <li>Report any alarms to Nett</li> </ul>
<b>Every 250 service hours or monthly</b>	<ul style="list-style-type: none"> <li>Drain any water accumulation from air tank</li> <li>Clean air compressor inlet filter (see Compressor Filter Maintenance, on right)</li> </ul>
<b>Every 500 service hours or 3 months</b>	<ul style="list-style-type: none"> <li>Inspect urea injection nozzle and if necessary clean by soaking in tap water</li> </ul>
<b>Every 1000 service hours or 6 months</b>	<ul style="list-style-type: none"> <li>Drain urea tank and flush using clean tap water</li> <li>Inspect urea filter and clean using tap water</li> </ul>

## Compressor Filter Maintenance

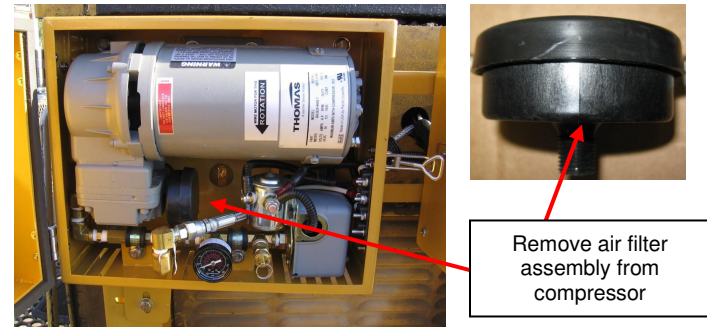

- Remove snap on cover to expose filter (assembly must be removed from compressor to avoid damage)
- Clean air filter with compressed air



- Return the filter to the housing and reinstall snap on cover
- Reinstall assembly on compressor